


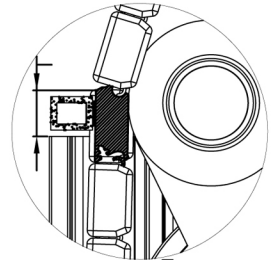
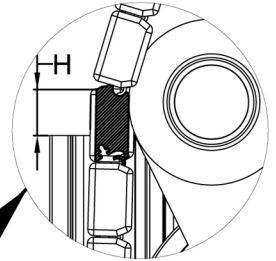


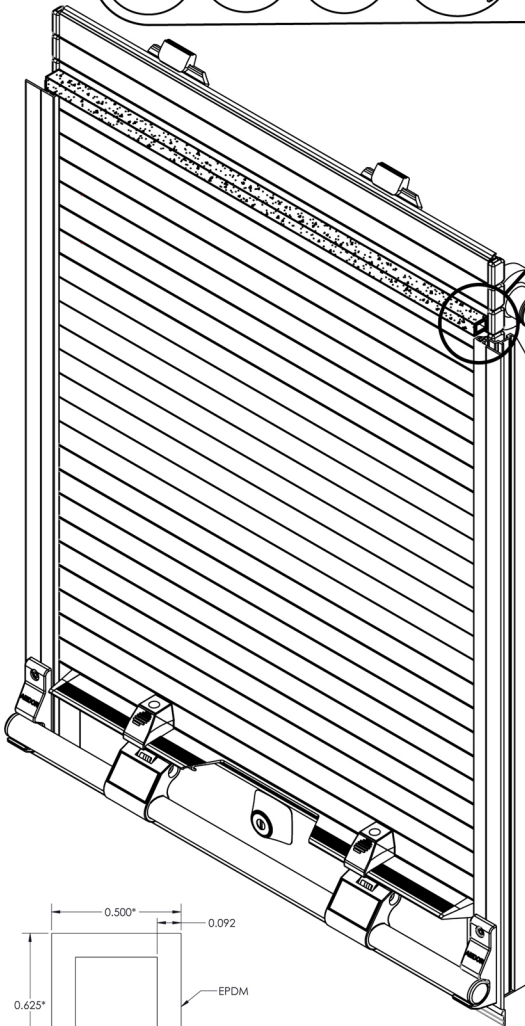


# Top Land Seal Installation

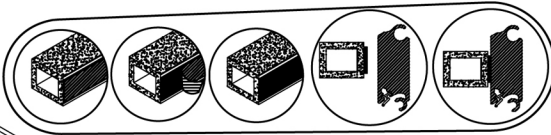


$$H > \frac{5}{8}''$$

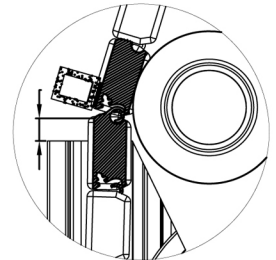

$$H < \frac{5}{8}''$$

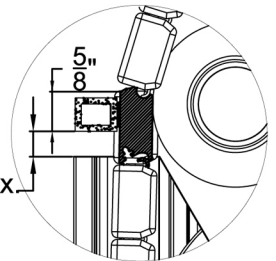

$\frac{1}{8}''$  Max.

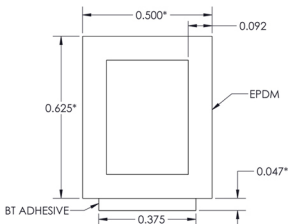

If you have any questions please feel free to contact your local AMDOR representative or a member of our customer care team at 1-877-462-6367



# Top Land Seal Installation

**In order to ensure vertical alignment between mating seal components, the Top Land Seal will be shipped loose within a sealed plastic bag and is found within the top tray of your door container.**

1. Upon completion of the door installation, place the top gutter into position. The Top Seal Land should be installed in a straight line so that the bottom edge is approximately 1/8" above the bottom edge of the top gutter; typically on the 4th slat from the top.
  2. Prepare the slat by removing any potential oils or debris by wiping with alcohol, do not use any abrasives or scuff the surface of the door.
  3. Remove the backer from the double-sided tape that is applied to the Top Land Seal. For best results, remove the backer as you're applying the seal. Ensure that you are applying the seal in a straight line the entire length of the slat.
- NOTE: Do not apply the seal beyond the surface area of the slat over the end shoes; there should be no contact between the Top Land Seal and adjacent slats.**
4. Using a roller, apply pressure to the Top Land Seal to ensure that any air bubbles are removed from the contact surface between the seal and the slat to ensure proper adhesion. Please allow 24 hours for the adhesive to fully cure.
  5. Install the Top Gutter and ensure that there is sufficient contact between the Top Gutter and the Top Land Seal you just installed on the AMDOR door curtain.

**Please See Visual Diagram On The Reverse Side**