

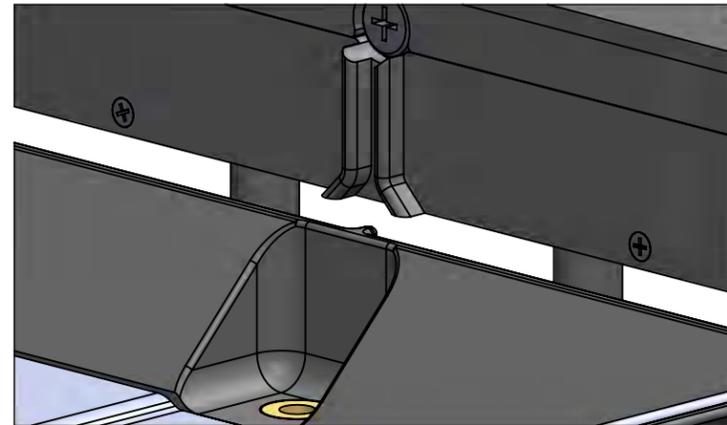


DRIPSHIELD INSTALLATION INSTRUCTIONS


Step 01: Place the DripShield into the compartment by aligning the rib on the end of the DripShield with the corresponding channel on the mounting bracket.

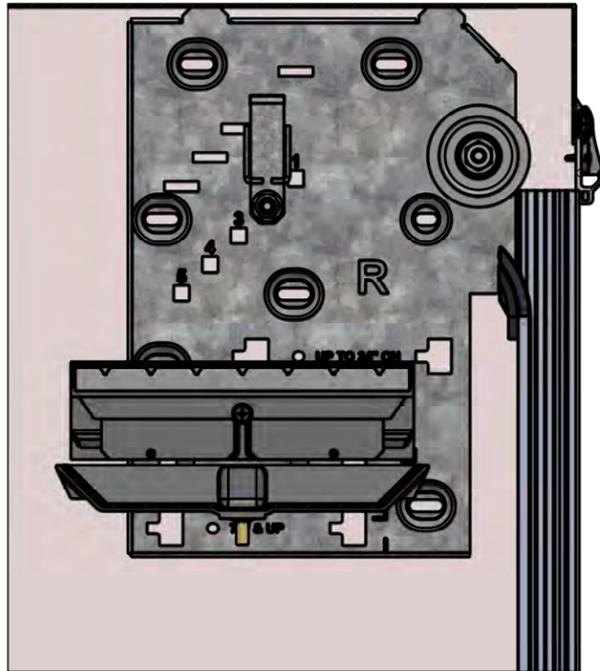


Step 02: Slide the DripShield up so that the angled surface on the DripShield end cap is in contact with the latches

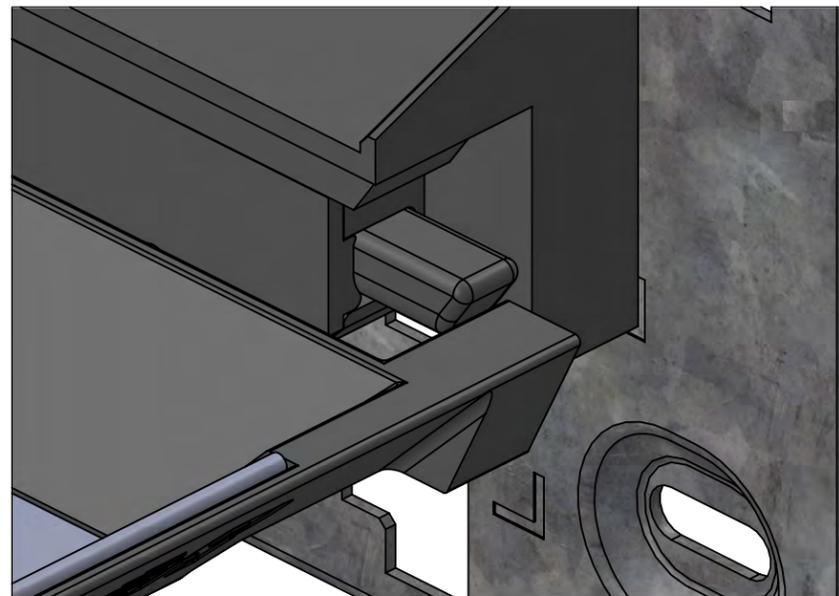

Step 03: Push the DripShield from the bottom past the spring loaded latches to secure in place. The latches will move out of the way of the DripShield automatically and snap back to secure the end of the DripShield in place.

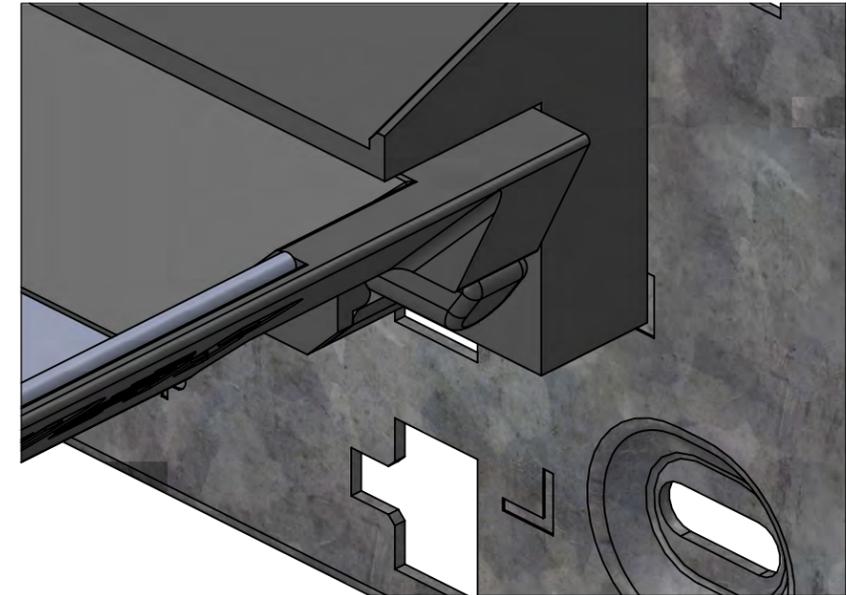


Step 04: Support the bottom of the DripShield while moving to the opposite side of the compartment. Repeat steps 01, 02, and 03 on the opposite side of the compartment to complete the DripShield Installation. Gently test that the DripShield is secure.

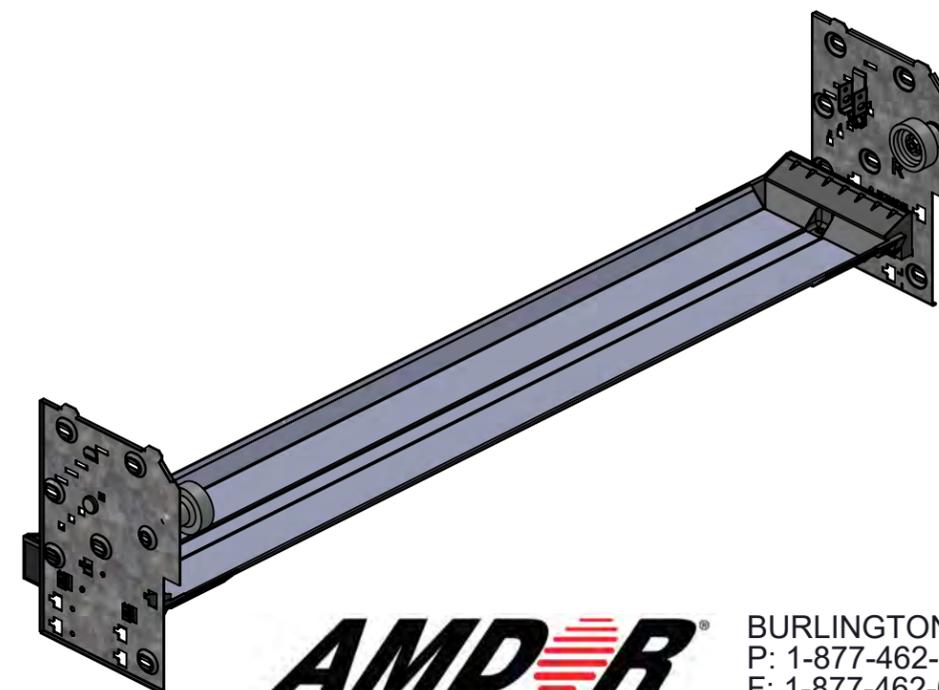


DRIPSHIELD REMOVAL INSTRUCTIONS

Step 01: Disconnect the drain tube, if the DripShield is equipped with drain tube configuration. Otherwise, move to step 02.

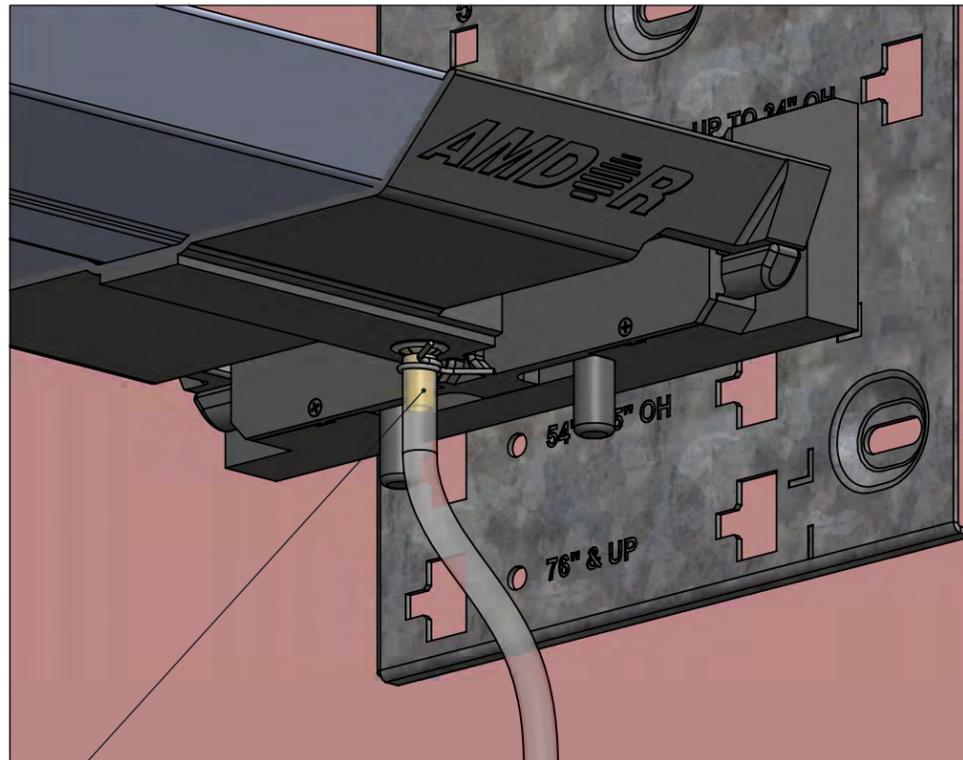


Disconnect Drain Tube

Step 03: Lower the DripShield until it is below the retracted latches, then release the latch handles. Support the DripShield end from the bottom while moving to the other side of the compartment and repeat step 02 on the opposite end of the DripShield in order to remove the DripShield from the compartment.

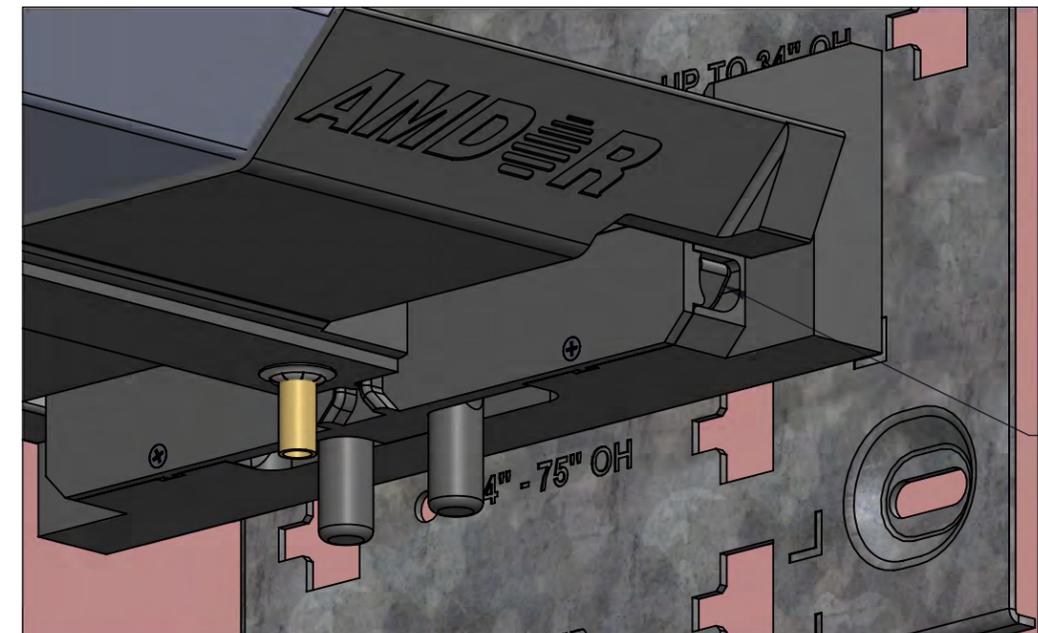

Retracted Latch

Step 02: Support the DripShield end from the bottom with one hand and squeeze the latch handles together with your opposite hand in order to retract the latches and release the DripShield. The latches are located under the mounting bracket.

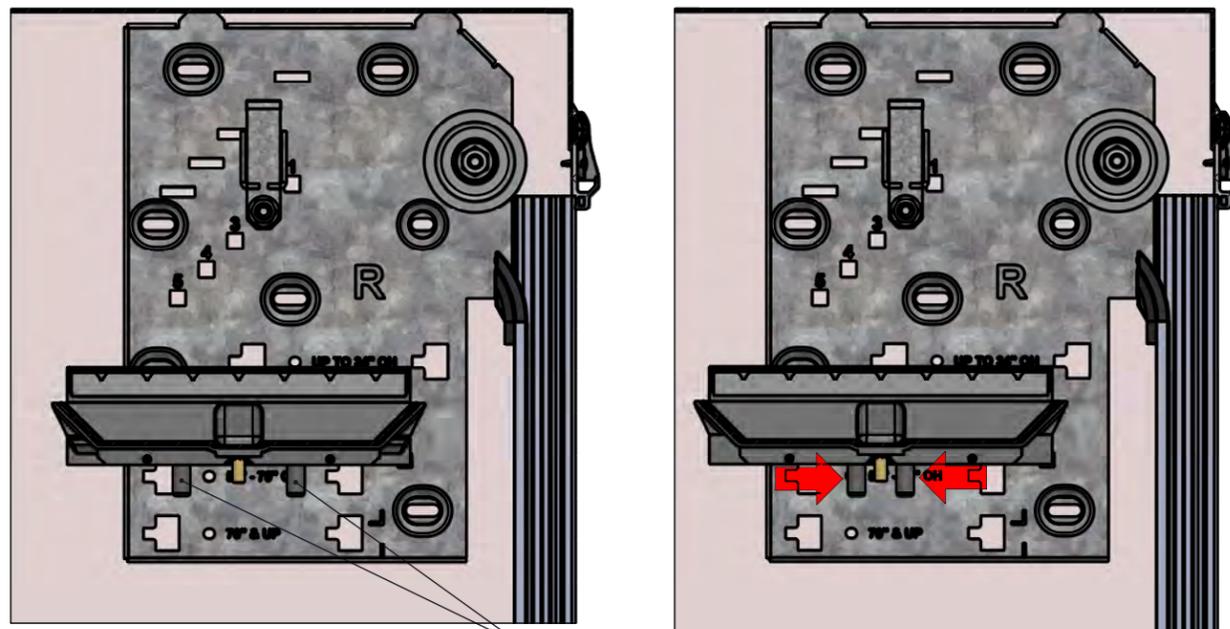

Squeeze Latch Handles

